GenesysTM

Programmable DC Power Supplies 3.3 kW in 2U
Built in RS-232 & RS-485 Interface
Parallel Current Summing
Optional Interfaces: USB

[XI] Compliant LAN
IEEE488.2 SCPI Multi-Drop
Isolated Analog Interface



Genesys™ Family

GEN H 750W Half Rack

GEN 1U 750/1500W Full Rack

GEN 2U 3.3/5kW

GEN 3U 10/15kW

TDK·Lambda

www.us.tdk-lambda.com/hp

The Genesys™ family of programmable power supplies sets a new standard for flexible, reliable, AC/DC power systems in Test & Measurement, Industrial and Laboratory applications.

Features include:

- High Power Density 3.3kW in 2U
- Wide Range of popular worldwide AC inputs, 1ø (230VAC) & 3ø (208VAC, 400VAC)
- Active Power Factor Correction (Single-Phase & Three-Phase AC Input)
- Output Voltage up to 600V, Current up to 400A
- Built-in RS-232/RS-485 Interface Standard
- Last Setting Memory; Front Panel Lockout
- Advanced Parallel reports total current up to four identical units
- Global Commands for Serial RS-232/RS-485 Interface
- Reliable Encoders for Voltage and Current Adjustment
- Independent Remote ON/OFF and Remote ENABLE/DISABLE
- Reliable Modular and SMT Design
- 19" Rack Mounted for ATE and OEM Applications, zero stack
- Optional Interfaces

Isolated Analog Programming and Monitoring

IEEE Multi-Drop - SCPI

LXI Compliant LAN Interface

USB Interface

- Labview[™] and LabWindows[™] drivers
- Five Year Warranty

Worldwide Safety Agency Approvals; CE Mark for LVD and EMC Regulation





Applications

GenesysTM power supplies are designed for demanding applications. Common controls are shared across all platforms.

Test & Measurement systems using GPIB control save significant costs by incorporating the optional IEEE Multi-Drop Interface (IEMD) in the Master. Then up to 30 Slaves may be equipped with the less expensive Optional RS-485 Multi-Drop (MD) interface.

Automated System designers will appreciate new, standard, remote programming features such as Global commands. Also, new high-speed status monitoring is available for the RS-485 bus as well as optional LAN (LXI compliant) or USB Interfaces.

Industrial & Military high power systems can be configured with up to four identical units in parallel, up to 60kW. No space is required above or below each power supply (zero stack). The Master can be configured by the user to report total current of the combination. Applications include Heaters, Magnets and Laser Diodes.


Aerospace & Satellite Testing systems use the complete Genesys™ Family: 1U 750W Half Rack, 1U 750W or 1500W Full-Rack, 2U 3.3kW and 3U 10/15kW. All are identical in Front Panel, Rear Panel Analog and Digital Interface Commands. A wide variety of outputs allows testing of many different devices.

Component Device Testing is simplified because of the many user-friendly control options in analog and digital interfaces. Lamps, capacitors, motors and actuators are typical devices tested.

Medical Imaging and Treatment systems require reliable power. Modular construction, SMT and thoroughly proven designs assure continuous performance at full rated power.

Semiconductor Processing & Burn-in equipment designers appreciate the wide variety of worldwide Inputs and Outputs from which to select depending on application. Selectable Safe and Auto Re-start protects loads and process integrity. Typical applications include Magnets, Filaments and Heaters.

Front Panel Description

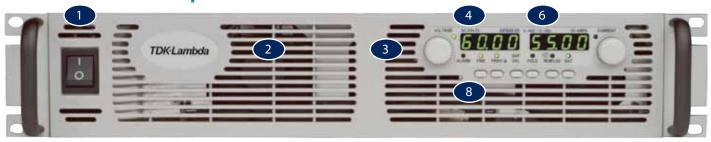

- 1. ON/OFF Switch
- 2. Air Intake allows zero stacking for maximum system flexibility and power density.
- 3. Reliable encoder controls Output Voltage, Address, OVP and UVL settings.
- 4. Volt Display shows Output Voltage and directly displays OVP, UVL and Address settings.
- 5. Reliable encoder controls Output Current, sets baudrate, and Advanced Parallel Mode
- 6. Current Display shows Output Current and displays Baud rate. Displays total current in Parallel Master/Slave Mode
- 7. Function/Status LEDs:
 - Alarm
- Fine Control
- Preview Settings

- Foldback Mode
- Remote Mode
- Output On
- 8. Pushbuttons allow flexible user configuration
 - Coarse and fine Adjustment of Output Voltage/Current and Advanced Parallel Master or Slave select.
 - Preview settings and set Voltage/Current with Output OFF, Front Panel Lock
 - Parallel Master/Slave
 - Set OVP and UVL Limits
 - Set Current Foldback Protection
 - Go to Local Mode and select Address and Baud rate
 - Output ON/OFF and Auto-Re-Start/Safe-Start Mode

Rear Panel Description



- 1. Remote/Local Output Voltage Sense Connections.
- 2. DIP Switches select 0-5V or 0-10V Programming and other functions.
- 3. DB25 (Female) connector allows (Non-isolated) Analog Program and Monitor and other functions.
- 4. RS-485 OUT to other Genesys™ Power Supplies.
- 5. RS-232/RS-485 IN Remote Serial Programming.
- 6. Output Connections: Rugged busbars (shown) for up to 100V Output; wire clamp connector for Outputs >100V
- 7. Exit air assures reliable operation when zero stacked.
- Input: 230VAC Single Phase (shown), 208 & 400VAC Three Phase, 50/60 Hz
 AC Input Connector: PHOENIX CONTACT Power Combicon PC 6/... Series with strain relief.
- 9. Optional Interfaces Position for IEEE 488.2 (GPIB) (shown), Isolated Analog Interface, LAN Interface or USB Interface.

Genesus ™ 3 3kW Specifications

| .0 MODEL 1.Rated output voltage(*1) | GEN V | 8-400 8 | 10-330 | 15-220 15 | 20-165 | 30-110 30 | 40-85 40 | 60-55 60 | 80-42 80 | 100-33 | 150-22 150 | 300-11 300 | 600- |
|--|---|--|--|--|--|--|--|--|---|--|--|-------------------------------------|--------------------------------|
| 2.Rated Output Current(*2) | A | 400 | 330 | 220 | 165 | 110 | 85 | 55 | 42 | 33 | 22 | 11 | 5.5 |
| 3.Rated Output Current(2) | ŵ | 3200 | 3300 | 3300 | 3300 | 3300 | 3400 | 3300 | 3360 | 3300 | 3300 | 3300 | 330 |
| and output i ono. | | 0200 | 0000 | 0000 | 0000 | 0000 | 0100 | 0000 | 0000 | 0000 | 0000 | 0000 | |
| 1 CONSTANT VOLTAGE MODE | | | | | | | | | | | | | |
| 1.Max.line regulation (0.01% of rated Vo+ 2mV)(*6) | mV | 2.8 | 3 | 3.5 | 4 | 5 | 6 | 8 | 10 | 12 | 17 | 32 | 62 |
| 2.Max load regulation (0.015% of rated Vo+5mV)(*7) | | 6.2 | 6.5 | 7.25 | 8 | 9.5 | 11 | 14 | 17 | 20 | 27.5 | 50 | 95 |
| B.Ripple and noise p-p 20MHz (*8) | mV | 60 | 60 | 60 | 60 | 60 | 60 | 60 | 80 | 100 | 100 | 300 | 50 |
| I.Ripple r.m.s 5Hz~1MHz | mV | 8 | 8 | 8 | 8 | 8 | 8 | 8 | 8 | 8 | 25 | 100 | 12 |
| 5.Remote sense compensation/wire | V | 2 | 2 | 2 | 2 | 5 | 5 | 5 | 5 | 5 | 5 | 5 | 5 |
| S.Temp. coefficient | PPM/°C | 100PPM/ | roted Val | t over Ohre | intorval fo | llowing 20 | minutoo wa | rm un Co | notant line | load & ten | | | |
| 7.Temp. stability | 1 | | | rated outp | | | | | | , ioau & teri | ip. | | |
| 3.Warm-up drift | 0 | Less mar | 1 0.05% 01 | | | ZIIIV OVEI | 30 minutes | lollowing | ower On. | 150 | | | 1 05 |
| 0.Up-prog. response time, 0~Vo Rated (*9) 10.Down-prog response time Full-load (*9) | mS mC | 20 | | 100 | 30 | | 160 | | | 150 | 00 | | 25 50 |
| No-load (*10) | mS mS | 500 | 600 | 700 | 800 | 900 | 1000 | 1100 | 1200 | 1500 | 2000 | 3500 | 400 |
| 1.Transient response time | mS | | | | | | | | | 0-90% of ra | | | 400 |
| 1. Transient response time | "" | current. C | output set- | point: 10-10 | 00%, local | sense. | | | • | | ateu output | ı | |
| | | Less than | 1mSec fo | r models u | p to and in | cluding 100 | V. 2msec | for models | above 10 | 0V | | | |
| 2 CONSTANT CURRENT MODE | | | | | | | | | | | | | |
| .Max.line regulation (0.01% of rated lo+ 2mA)(*6) | mA | 42 | 35 | 24 | 18.5 | 13 | 10.5 | 7.5 | 6.2 | 5.3 | 4.2 | 3.1 | 2. |
| .Max.load regulation (0.02% of rated lo+5mA)(*11) | mA | 85 | 71 | 49 | 38 | 27 | 22 | 16 | 13.4 | 11.6 | 9.4 | 7.2 | 6. |
| Ripple r.m.s 5Hz~1MHz . (*12) | mA | 1300 | 1200 | 880 | 660 | 300 | 200 | 100 | 80 | 70 | 60 | 20 | 1 |
| Load regulation thermal drift | DDM | | | rated outpu | | | | | ange. | | | | |
| .Temp. coefficient | PPM/°C | | | ted output | | | | | -44 " | 1101 | | | |
| .Temp. stability | 1 | | | | | | | | | load & terr | perature. | | |
| .Warm-up drift | | | | ess than 0.5 | | | | | | | ٠ | | |
| | | 30V~600 | v models: | Less than | U.25% of r | ated outpu | t current o | ver 30 mini | ites follow | ing power (| JN. | | |
| .3 PROTECTIVE FUNCTIONS | | | | | | | | | | | | | |
| . OCP | | - | Constant (| | | | | | | | | | |
| . OCP Foldback | | | | vhen power | | | | | | | | | |
| . OVP type | | + | | | | | | | | unication p | | | 1. |
| OVP trip point | | | 0.5~12V | 1~18V | 1~24V | 2~36V | 2~44V | 5~66V | 5~88V | 5~110V | 5~165V | 5~330V | 5~6 |
| Output Under Voltage Limit | | | | el or comm | | ort. Preve | nts from ac | ijusting Voi | ut below lir | nit. | | | |
| . Over Temp. Protection | | User sele | ectable , la | tched or no | ori-latched. | | | | | | | | |
| 4 ANALOG PROGRAMMING AND MONITORING | | | | | | | | | | | | | |
| .Vout Voltage Programming | | | | ~10V, user | | | | | | | | | |
| 2.lout Voltage Programming (*13) | | | | ~10V, user | | | | | | | | | |
| 3.Vout Resistor Programming | | | | hm full sca | | | | | | | | | |
| .lout Resistor Programming (*13) | | | hm full sca | | | | | of rated I | out. | | | | |
| 5.On/Off control (rear panel) | | | | ge: 0~0.6V/ | | | user selec | table logic. | | | | | |
| Output Current monitor (*13) | | | | curacy:±19 | | | | | | | | | |
| 7.Output Voltage monitor | | | | curacy:±1% | | | | | | | | | |
| 8.Power Supply OK signal | | | | K, 0V-Fail | | | | le accordent | Ο το Λ | | | | |
| CV/CC Indicator | | | | /) source: 1 | | | | | uma. | | | | |
| | | | Dry contact. Open:off , Short: on. Max. voltage at Enable/Disable in: 6V. By electrical signal or Open/Short: 0~0.6V or short: Remote: 4~5V or open: Local | | | | | | | | | | |
| | | By electrical signal or Open/Short: 0~0.6V or short: Remote, 4~5V or open: Local. Open collector, Local: Off, Remote: On. Maximum voltage: 30V, maximum sink current: 10mA. | | | | | | | | | | | |
| Local/Remote analog control | | | | | | | | / marden | | | | | |
| Local/Remote analog control | | | | | | | oltage: 30\ | /, maximun | I SINK CUIT | ent: 10mA. | | | |
| Enable/Disable Local/Remote analog control Local/Remote analog control Indicator FRONT PANEL | | | | | | | oltage: 30\ | /, maximur | II SINK CUIT | ent: 10mA. | | | |
| Local/Remote analog control Local/Remote analog control Indicator FRONT PANEL | | Open col | lector, Loc | al: Off, Ren | note: On. I parate end | Maximum v | | | | | | | |
| Local/Remote analog control Local/Remote analog control Indicator FRONT PANEL | | Open col Vout/ lou OVP/UVI | lector, Loc t manual a manual a | al: Off, Ren | note: On. I parate enc olt. Adjust e | Maximum voders (coa | rse and fin | e adjustme | nt selectat | ole). | | | |
| Local/Remote analog control Local/Remote analog control Indicator FRONT PANEL | | Vout/ Iou OVP/UVI On/Off, C | t manual a manual a manual a | cal: Off, Ren djust by se adjust by Vo off, Re-start | parate enc olt. Adjust e modes (au | oders (coa ncoder. uto, safe), F | rse and fin | e adjustme | nt selectal | | ntrol. | | |
| I1. Local/Remote analog control I2. Local/Remote analog control Indicator | | Vout/ lour OVP/UVI On/Off, C Address | t manual a manual a utput on/c | ad: Off, Rending of the control of t | parate end bit. Adjust e modes (au for current) | oders (coa encoder. uto, safe), F adjust enc | rse and fin | e adjustme | nt selectal | ole). | ntrol. | | |
| Local/Remote analog control Local/Remote analog control Indicator FRONT PANEL | | Vout/ lou OVP/UVI On/Off, C Address Re-start | t manual a manual a output on/o selection b | ad: Off, Rer adjust by se adjust by Vo off, Re-start by Voltage (| parate end olt. Adjust e modes (au for current) start, safe r | oders (coa ncoder. uto, safe), F adjust enc node). | rse and fin Foldback co | e adjustme | nt selectal | ole). | ntrol. | | |
| Local/Remote analog control Local/Remote analog control Indicator FRONT PANEL Control functions | | Vout/ lou OVP/UVI On/Off, C Address Re-start I Baud rate | t manual a manual a mutput on/c selection b modes (au | djust by se djust by Vo off, Re-start by Voltage (tomatic res : 1200,240 | parate encolt. Adjust emodes (au corrent) start, safe r 0,4800,960 | oders (coa encoder. uto, safe), F adjust enc node). 00 and 19,2 | rse and fin Foldback co oder. Num | e adjustme ontrol (CV t ber of addr | nt selectal | ole). | ntrol. | | |
| Local/Remote analog control Local/Remote analog control Indicator FRONT PANEL .Control functions | | Vout/ lour OVP/UVI On/Off, C Address Re-start Baud rate Voltage: | t manual a manual a manual a putput on/o selection b modes (au e selection 4 digits, A | djust by se djust by Vo off, Re-start by Voltage (tomatic res : 1200,240 ccuracy: 0. | parate encolt. Adjust e modes (au cor current) start, safe r 0,4800,960 5% of rate | oders (coa encoder. uto, safe), F adjust enconde). 00 and 19,2 d output Vo | rse and fin Foldback co oder. Num 200. Itage ±1 co | e adjustme ontrol (CV t ber of addr ount. | nt selectal | ole). | ntrol. | | |
| Local/Remote analog control Local/Remote analog control Indicator FRONT PANEL Control functions Display | | Vout/ lour OVP/UVI On/Off, C Address Re-start Baud rate Voltage: Current: | t manual a manual a manual a butput on/o selection b modes (au e selection 4 digits, A 4 digits, A | djust by se djust by Vo off, Re-start by Voltage (atomatic res : 1200,240 ccuracy: 0.5 ccuracy: 0.5 | parate encolt. Adjust emodes (au corrent) start, safe routenes, safe routenes, safe routenes, safe routenes, safe rates, safe routenes, safe rates, sa | oders (coa encoder. uto, safe), F adjust enconde). 00 and 19,2 d output Vo | rse and fin Foldback co oder. Num 200. Iltage ±1 co rent ±1 co | e adjustme ontrol (CV t ber of addr ount. | nt selectal o CC), Go esses:31. | to local co | ntrol. | | |
| Local/Remote analog control Local/Remote analog control Indicator FRONT PANEL Control functions Display | | Vout/ lour OVP/UVI On/Off, C Address Re-start Baud rate Voltage: Current: | t manual a manual a manual a butput on/o selection b modes (au e selection 4 digits, A 4 digits, A | djust by se djust by Vo off, Re-start by Voltage (tomatic res : 1200,240 ccuracy: 0. | parate encolt. Adjust emodes (au corrent) start, safe routenes, safe routenes, safe routenes, safe routenes, safe rates, safe routenes, safe rates, sa | oders (coa encoder. uto, safe), F adjust enconde). 00 and 19,2 d output Vo | rse and fin Foldback co oder. Num 200. Iltage ±1 co rent ±1 co | e adjustme ontrol (CV t ber of addr ount. | nt selectal o CC), Go esses:31. | to local co | ntrol. | | |
| Local/Remote analog control Local/Remote analog control Indicator FRONT PANEL Control functions Display | nal GPII | Vout/ lour OVP/UVI On/Off, C Address Re-start Baud rate Voltage: Voltage, | t manual a manual a manual a butput on/o selection b modes (au e selection 4 digits, A 4 digits, A Current, Al | djust by se djust by Vo off, Re-start by Voltage (atomatic res : 1200,240 ccuracy: 0.5 ccuracy: 0.5 | parate encolt. Adjust emodes (au corrent) start, safe routenes, safe routenes, safe routenes, safe routenes, safe rates, safe routenes, safe rates, sa | oders (coa encoder. uto, safe), F adjust enconde). 00 and 19,2 d output Vo | rse and fin Foldback co oder. Num 200. Iltage ±1 co rent ±1 co | e adjustme ontrol (CV t ber of addr ount. | nt selectal o CC), Go esses:31. | to local co | ntrol. | | |
| Local/Remote analog control Local/Remote analog control Indicator FRONT PANEL Control functions Display Indications Indications Indications Indications Indications Indications Indications | nal GPIE | Vout/ lour OVP/UVI On/Off, C Address Re-start Baud rate Voltage: Voltage, | t manual a manual a manual a butput on/o selection b modes (au e selection 4 digits, A 4 digits, A Current, Al | djust by se djust by Vo off, Re-start by Voltage (atomatic res : 1200,240 ccuracy: 0.5 ccuracy: 0.5 | parate encolt. Adjust emodes (au corrent) start, safe routenes, safe routenes, safe routenes, safe routenes, safe rates, safe routenes, safe rates, sa | oders (coa encoder. uto, safe), F adjust enconde). 00 and 19,2 d output Vo | rse and fin Foldback co oder. Num 200. Iltage ±1 co rent ±1 co | e adjustme ontrol (CV t ber of addr ount. | nt selectal o CC), Go esses:31. | to local co | ntrol. | 300 | 60 |
| Local/Remote analog control Local/Remote analog control Indicator FRONT PANEL | | Vout/ lour OVP/UVI On/Off, C Address Re-start I Baud rate Voltage: Voltage, I S Interfa | t manual a manual a manual a putput on/o selection b modes (au e selection 4 digits, A d digits, A Current, Al | idjust by se idjust by Vo off, Re-start by Voltage (intomatic res : 1200,240 ccuracy: 0.scuracy: 0 | parate encolt. Adjust emodes (au for current) start, safe r 0,4800,960 5% of rateo Preview, F | oders (coa encoder. Ito, safe), F adjust enc node). Io and 19,2 d output Vo output cur oldback, Lo | rse and fin Foldback co oder. Num 200. Iltage ±1 co rent ±1 col ocal, Outpu | e adjustme ontrol (CV t ber of addr ount. unt. it On, Fron | nt selectal o CC), Go esses:31. | to local co | | 300 | 60 |
| 1. Local/Remote analog control 2. Local/Remote analog control Indicator 5 FRONT PANEL Control functions 2. Display 5. Indications 6. Interface RS232&RS485 or Option Model 1. Remote Voltage Programming (16 bit) Resolution (0.012% of Vo Rated) | | Vout/ lour OVP/UVI On/Off, C Address Re-start I Baud rate Voltage: Voltage, I S Interfa | t manual a manual a manual a manual a butput on/c selection bemodes (au e selection 4 digits, A 4 digits, A Current, Al | djust by se djust by Ve djust by Ve off, Re-start by Voltage (tomatic res : 1200,240 ccuracy: 0. ccuracy: 0. tarm, Fine, | parate encolt. Adjust e modes (at or current) start, safe r 0,4800,960 5% of rates 6% of rates 20 | Maximum v oders (coa ncoder, uto, safe), F adjust enc node), 00 and 19,2 d output Vor output cur oldback, Lo 30 3.60 | Foldback or oder. Num 1000. 1ltage ±1 corent ±1 coreal, Outpu | e adjustme ontrol (CV to ber of addro ount. unt. ut On, Fron 60 | nt selectal o CC), Go esses:31. | to local co | 150 | 36 | 7: |
| 1. Local/Remote analog control 2. Local/Remote analog control Indicator 5 FRONT PANEL Control functions Display Indications 6 Interface RS232&RS485 or Option Model Remote Voltage Programming (16 bit) Resolution (0.012% of Vo Rated) | V | Vout/ lou OVP/UVI On/Off, C Address, Re-start i Baud rate Voltage: Voltage, Voltage, 8 | t manual a _ manual a | djust by see djust by Vo off, Re-start by Voltage (tomatic res : 1200,240 ccuracy: 0.5 ccuracy: 0.5 arm, Fine, | parate encolt. Adjust e modes (at or current) start, safe r 0,4800,960 5% of ratec Preview, F | oders (coa encoder. uto, safe), F adjust enc mode). 30 and 19,2 d output cur oldback, Lo | rse and fin Foldback cr oder. Num 200. Iltage ±1 co rent ±1 co cocal, Outpu | e adjustme entrol (CV tober of addrount. unt. unt. ton, Front | nt selectal o CC), Go esses:31. | to local co | 150 | | 7 |
| 1. Local/Remote analog control 2. Local/Remote analog control Indicator 5 FRONT PANEL Control functions 2. Display 2. Display 3. Indications 3. Interface RS232&RS485 or Option 3. Indications 3. Remote Voltage Programming (16 bit) 3. Remote Voltage Programming (16 bit) 3. Resolution (0.012% of Vo Rated) 3. Recuracy (0.05%Vo Rated+0.05% of Vo Actual Output) | V mV | Vout/ lou OVP/IVVI On/Off, C Address Re-start I Baud rate Voltage: Current: Voltage, 1 8 Interfa 8 | t manual a manual a manual a manual a butput on/c selection bemodes (au e selection 4 digits, A 4 digits, A Current, Al | djust by se djust by Ve djust by Ve off, Re-start by Voltage (tomatic res : 1200,240 ccuracy: 0. ccuracy: 0. tarm, Fine, | parate encolt. Adjust e modes (at or current) start, safe r 0,4800,960 5% of rates 6% of rates 20 | Maximum v oders (coa ncoder, uto, safe), F adjust enc node), 00 and 19,2 d output Vor output cur oldback, Lo 30 3.60 | Foldback or oder. Num 1000. 1ltage ±1 corent ±1 coreal, Outpu | e adjustme ontrol (CV to ber of addro ount. unt. ut On, Fron 60 | nt selectal o CC), Go esses:31. | to local co | 150 | 36 | 7: |
| 1. Local/Remote analog control 2. Local/Remote analog control Indicator 5 FRONT PANEL Control functions Display Indications 6 Interface RS232&RS485 or Option (Indicator) Remote Voltage Programming (16 bit) Lesolution (0.012% of Vo Rated) Locuracy (0.05%Vo Rated+0.05% of Vo Actual Output) Remote Current Programming (16 bit) | V mV mV | Vout/ lou OVP/IVVI On/Off, C Address Re-start i Baud rate Voltage: Current: Voltage, Voltage, 8 0.96 8 | t manual a manual a manual a manual a butput on/o selection b modes (au e selection 4 digits , A 4 digits, A Ccurrent, Al CC 10 1.2 | djust by se digust by Ve digust by Ve off, Re-start by Ve off, Re-start by Ve off off off off off off off off off of | parate encolt. Adjust e modes (ai or current) tart, safe r 0,4800,960 5% of rate: 5% of rate: 20 | Maximum v oders (coa ncoder. uto, safe), F adjust enc node), 00 and 19,2 d output Vo oldback, Lo 30 3.60 3.0 | rse and fin Foldback co oder. Num 100. Iltage ±1 cor ocal, Outpu 40 4.80 40 | e adjustment of CV to ber of address ount. Junt. t On, Front 60 7.2 60 | nt selectal o CC), Go esses:31. i Panel Loi 80 9.6 80 | to local co | 150 18 150 | 36 300 | 7: |
| 1. Local/Remote analog control 2. Local/Remote analog control Indicator 5 FRONT PANEL Control functions Display Indications 6 Interface RS232&RS485 or Option Iodel Remote Voltage Programming (16 bit) esolution (0.012% of Vo Rated) ccuracy (0.05%Vo Rated+0.05% of Vo Actual Output) Remote Current Programming (16 bit) esolution (0.012% of lo Rated) | V mV mV | Vout/ lou OVP/I/VI OVP/I/VI ON/Off, C Address Re-start I Baud rate Voltage: Voltage, I Voltage, 8 | t manual a manual a manual a manual a manual a butput on/c selection b modes (au selection t d digits, A d digits, A Current, Al CC 10 1.2 10 39.6 | djust by se djust by se djust by se djust by Ve djust by Ve | parate enc. It. Adjust e modes (ai or current) start, safe r 0,4800,960 5% of ratect Preview, F 20 2.40 20 | Maximum v oders (coa ncoder. uto, safe), F adjust enc node). 00 and 19,2,2 00 output cur oldback, Lo 30 3,60 3,0 13,2 | rse and fin Foldback co oder. Num 200. Iltage ±1 co rent ±1 co ocal, Outpu 40 4.80 40 | e adjustment of CV to ber of address ount. Junt. art. on, Front of CV to CV t | nt selectal o CC), Go esses:31. t Panel Loc 80 9.6 80 | to local co | 150 18 150 | 36 300 1.3 | 7 60 |
| 1. Local/Remote analog control 2. Local/Remote analog control Indicator 5 FRONT PANEL Control functions Display Indications 6 Interface RS232&RS485 or Option Indel Remote Voltage Programming (16 bit) Incesolution (0.012% of Vo Rated) Indications Remote Current Programming (16 bit) Incesolution (0.012% of Vo Rated) | V mV mV | Vout/ lou OVP/IVVI On/Off, C Address Re-start i Baud rate Voltage: Current: Voltage, Voltage, 8 0.96 8 | t manual a manual a manual a manual a butput on/o selection b modes (au e selection 4 digits , A 4 digits, A Ccurrent, Al CC 10 1.2 | djust by se digust by Ve digust by Ve off, Re-start by Ve off, Re-start by Ve off off off off off off off off off of | parate encolt. Adjust e modes (ai or current) tart, safe r 0,4800,960 5% of rate: 5% of rate: 20 | Maximum v oders (coa ncoder. uto, safe), F adjust enc node), 00 and 19,2 d output Vo oldback, Lo 30 3.60 3.0 | rse and fin Foldback co oder. Num 100. Iltage ±1 cor ocal, Outpu 40 4.80 40 | e adjustment of CV to ber of address ount. Junt. t On, Front 60 7.2 60 | nt selectal o CC), Go esses:31. i Panel Loi 80 9.6 80 | to local co | 150 18 150 | 36 300 | 7 |
| 1. Local/Remote analog control 2. Local/Remote analog control Indicator 5 FRONT PANEL Control functions Display Indications 6 Interface RS232&RS485 or Option Indel Remote Voltage Programming (16 bit) esolution (0.012% of Vo Rated) ccuracy (0.05%Vo Rated+0.05% of Vo Actual Output) Remote Current Programming (16 bit) esolution (0.012% of Io Rated) ccuracy (0.2% of Io Rated) ccuracy (0.2% of Io Rated-0.1% of Io Actual Output) (*13) | V mV mV | Vout/ lou OVP/I/VI OVP/I/VI ON/Off, C Address Re-start I Baud rate Voltage: Voltage, I Voltage, 8 | t manual a manual a manual a manual a manual a butput on/c selection b modes (au selection t d digits, A d digits, A Current, Al CC 10 1.2 10 39.6 | djust by se djust by se djust by se djust by Ve djust by Ve | parate enc. It. Adjust e modes (ai or current) start, safe r 0,4800,960 5% of ratect Preview, F 20 2.40 20 | Maximum v oders (coa ncoder. uto, safe), F adjust enc node). 00 and 19,2,2 00 output cur oldback, Lo 30 3,60 3,0 13,2 | rse and fin Foldback co oder. Num 200. Iltage ±1 co rent ±1 co ocal, Outpu 40 4.80 40 | e adjustment of CV to ber of address ount. Junt. art. on, Front of CV to CV t | nt selectal o CC), Go esses:31. t Panel Loc 80 9.6 80 | to local co | 150 18 150 | 36 300 1.3 | 7 60 |
| 1. Local/Remote analog control 2. Local/Remote analog control Indicator 5 FRONT PANELControl functions DisplayIndications 6 Interface RS232&RS485 or Option dodelRemote Voltage Programming (16 bit) resolution (0.012% of Vo Rated) ccuracy (0.05%Vo Rated+0.05% of Vo Actual Output)Remote Current Programming (16 bit) resolution (0.012% of lo Rated) ccuracy (0.2% of lo Rated)Readback Voltage resolution (0.012% of Vo Rated) | V mV mV | Vout/ lou OVP/I/VI OVP/I/VI ON/Off, C Address Re-start I Baud rate Voltage: Voltage, V 3 Interfa 8 | t manual a manual a manual a manual a manual a butput on/c selection b modes (au selection t d digits, A d digits, A Current, Al CC 10 1.2 10 39.6 | djust by se djust by se djust by se djust by Ve djust by Ve | parate enc. It. Adjust e modes (ai or current) start, safe r 0,4800,960 5% of ratect Preview, F 20 2.40 20 | Maximum v oders (coa ncoder. uto, safe), F adjust enc node). 00 and 19,2,2 00 output cur oldback, Lo 30 3,60 3,0 13,2 | rse and fin Foldback co oder. Num 200. Iltage ±1 co rent ±1 co ocal, Outpu 40 4.80 40 | e adjustment of CV to ber of address ount. Junt. art. on, Front of CV to CV t | nt selectal o CC), Go esses:31. t Panel Loc 80 9.6 80 | to local co | 150 18 150 | 36 300 1.3 | 7 60 0 16 |
| 1. Local/Remote analog control 2. Local/Remote analog control Indicator 5 FRONT PANEL .Control functions Display Indications 6 Interface RS232&RS485 or Option Model .Remote Voltage Programming (16 bit) eccuracy (0.05% Vo Rated) .ccuracy (0.05% Vo Rated+0.05% of Vo Actual Output) .Remote Current Programming (16 bit) eccuracy (0.2% of lo Rated) .ccuracy (0.2% of lo Rated+0.1% of lo Actual Output) (*13 .Readback Voltage elesolution (0.012% of Vo Rated+) | MV mV mA mA | Open col Vout/ lou OVP/UVI ON/Off, C Address Re-start I Baud rate Voltage: Voltage, I Voltage, 8 8 1200 | t manual a manual a manual a manual a manual a butput on/c selection t modes (au selection t d digits, A d digits, A Current, Al CC 10 1.2 10 39.6 990 | djust by se djust by se djust by se djust by the se djust by Voltage (in Re-start by Voltage (in Re-st | parate enc. It Adjust e modes (ai or current) start, safe r 0,4800,960 5% of ratec Preview, F 20 2.40 20 | Maximum v oders (coa ncoder. tto, safe), F adjust enc. node). 10 and 19,2 0 output cur oldback, Lo 30 3,60 3,0 13,2 3,30 | rse and fin Foldback cooder. Num 200. Iltage ±1 corent ±1 corocal, Outpu 40 4.80 40 | e adjustment (CV to ber of address) bunt. unt. t On, Front 60 7.2 60 6.6 165 | nt selectal o CC), Go esses:31. i Panel Loc 80 9.6 80 5.0 126 | to local co to local co sk, CVCC. 100 4.0 99 | 150 18 150 2.6 66 | 36 300 1.3 33 | 7 60 0 16 |
| 1. Local/Remote analog control 2. Local/Remote analog control Indicator 5 FRONT PANEL Control functions Display Indications 6 Interface RS232&RS485 or Option Model Remote Voltage Programming (16 bit) Resolution (0.012% of Vo Rated) Recuracy (0.05%Vo Rated+0.05% of Vo Actual Output) Remote Current Programming (16 bit) Resolution (0.012% of Io Rated) Resolution (0.012% of Io Rated+0.1% of Io Actual Output) (*13) Readback Voltage Resolution (0.012% of Vo Rated) Recuracy (0.1%Vo Rated+0.1% of Vo Actual Output) | MV mV mA mA mV | Vout/ lou OVP/JVVI On/Off, C Address: Re-start I Baud rate Voltage: Voltage, Voltage, 3 Interfa 8 0.96 8 | t manual a m | djust by se ddjust by se ddjust by Ve ddjust | parate enc. It. Adjust e modes (au or current) start, safe r 0,4800,966 5% of ratec Preview, F 20 2.40 20 19.8 495 | Maximum v oders (coa ncoder. uto, safe), F adjust enc. node). 10 and 19,2 0 output cur oldback, Lo 30 3.60 3.60 3.60 | rse and fin Foldback or oder. Num 200. Ultage ±1 co rent ±1 co rocal, Outpu 40 4.80 40 10.2 255 | e adjustme control (CV I ber of addr count. cut On, Fron 60 7.2 60 6.6 165 | nt selectat o CC), Go esses:31. Panel Loc 80 9.6 80 126 | to local co ck, CVCC. 100 12 100 4.0 99 | 150 18 150 2.6 66 | 36 300 1.3 33 | 7 60 0 16 |
| 1. Local/Remote analog control 2. Local/Remote analog control Indicator 5 FRONT PANEL .Control functions Display Display Indications 6 Interface RS232&RS485 or Option Addel Remote Voltage Programming (16 bit) Resolution (0.012% of Vo Rated) Accuracy (0.05%Vo Rated+0.05% of Vo Actual Output) Remote Current Programming (16 bit) Resolution (0.012% of lo Rated) Accuracy (0.2% of lo Rated) Accuracy (0.2% of lo Rated+0.1% of lo Actual Output) (*13) Readback Voltage Resolution (0.012% of Vo Rated) Accuracy (0.1%Vo Rated+0.1% of Vo Actual Output) Readback Current Readback Current | MV mV mAB) mA | Vout/ lou OVP/UVI On/Off, C Address: Re-start I Baud rate Voltage: Voltage; Voltage, 3 Interfa 8 0.96 8 1200 | t manual a m | djust by se djust by se djust by Ve by Ve djust by Ve | parate enc. In parate enc. It. Adjust e modes (au modes (au or current) start, safe r 0,4800,966 5% of ratee. Preview, F 20 2.40 20 19.8 495 | Maximum v oders (coa ncoder. uto, safe), F adjust enc. node). 10 and 19,2 0 output cur oldback, Lo 30 3.60 3.30 3.60 60 | rse and fin Foldback or oder. Num 200. Iltage ±1 cx rent ±1 coloracal, Outpu 40 4.80 40 10.2 255 4.80 80 | e adjustme control (CV tober of address contr | nt selectat o CC), Go esses:31. Panel Loc 80 9.6 80 126 9.6 160 | to local co ck, CVCC. 100 12 100 4.0 99 12 200 | 150 18 150 2.6 66 18 300 | 36 300 1.3 33 36 600 | 7 60 0. 16 7 12 |
| 1. Local/Remote analog control 2. Local/Remote analog control Indicator 5 FRONT PANEL Control functions Display Indications 6 Interface RS232&RS485 or Option Ideal Remote Voltage Programming (16 bit) Esolution (0.012% of Vo Rated) ccuracy (0.05%Vo Rated+0.05% of Vo Actual Output) Remote Current Programming (16 bit) Esolution (0.012% of Io Rated) ccuracy (0.2% of Io Rated) ccuracy (0.2% of Io Rated+0.1% of Io Actual Output) (*13 Readback Voltage Iesolution (0.012% of Vo Rated) ccuracy (0.1%Vo Rated+0.1% of Vo Actual Output) Readback Current Esolution (0.012% of Io Rated) | MV mV mA mV mV mV mV | Vout/ lou OVP/UVI On/Off, C Address: Re-start I Baud rate Voltage: Voltage, Voltage, 1 Voltage, 1 0.96 8 1200 0.96 16 | t manual a m | djust by se djust by se djust by se djust by Ve by Ve djust by Ve by Ve by Ve | parate encolt. Adjust e modes (au or current) start, safe r 0,4800,966 5% of rates 5% of rates Preview, F 20 2.40 20 495 495 495 40 40 19.8 | Maximum v oders (coa necoder. uto, safe), F adjust enc node). 00 and 19,2 01 output cur oldback, Lo 030 03.60 030 03.60 060 | rse and fin Foldback cc oder. Num 200. Itage ±1 cc rent ±1 cor ocal, Outp 40 4.80 40 10.2 255 4.80 80 | e adjustme control (CV to ber of addr count. unt. to On, Fron 60 7.2 60 6.6 165 | nt selectal o CC), Go esses:31. Panel Loc 80 9.6 80 126 9.6 160 5.0 | to local co ck, CVCC. 100 12 100 4.0 99 12 200 | 150 18 150 2.6 66 18 300 | 36 300 1.3 33 36 600 | 7 60 0 16 7 12 |
| 1. Local/Remote analog control 2. Local/Remote analog control Indicator 5 FRONT PANEL Control functions Display Indications 6 Interface RS232&RS485 or Option Model Remote Voltage Programming (16 bit) Resolution (0.012% of Vo Rated) Accuracy (0.05%Vo Rated+0.05% of Vo Actual Output) Remote Current Programming (16 bit) Resolution (0.012% of Io Rated) Accuracy (0.2% of Io Rated) Accuracy (0.2% of Io Rated+0.1% of Io Actual Output) (*13 Readback Voltage Resolution (0.012% of Vo Rated) Accuracy (0.1%Vo Rated+0.1% of Vo Actual Output) Readback Current Resolution (0.012% of Io Rated) Accuracy (0.1%Vo Rated+0.1% of Vo Actual Output) Readback Current Resolution (0.012% of Io Rated) | MV mV mA mV mV mV mV | Vout/ lou OVP/UVI On/Off, C Address: Re-start I Baud rate Voltage: Voltage; Voltage, 3 Interfa 8 0.96 8 1200 | t manual a m | djust by se djust by se djust by Ve by Ve djust by Ve | parate enc. In parate enc. It. Adjust e modes (au modes (au or current) start, safe r 0,4800,966 5% of ratee. Preview, F 20 2.40 20 19.8 495 | Maximum v oders (coa ncoder. uto, safe), F adjust enc. node). 10 and 19,2 0 output cur oldback, Lo 30 3.60 3.30 3.60 60 | rse and fin Foldback or oder. Num 200. Iltage ±1 cx rent ±1 coloracal, Outpu 40 4.80 40 10.2 255 4.80 80 | e adjustme control (CV tober of address contr | nt selectat o CC), Go esses:31. Panel Loc 80 9.6 80 126 9.6 160 | to local co ck, CVCC. 100 12 100 4.0 99 12 200 | 150 18 150 2.6 66 18 300 | 36 300 1.3 33 36 600 | 7 60 0. 16 |
| 1. Local/Remote analog control 2. Local/Remote analog control Indicator 5. FRONT PANELControl functions DisplayIndications 6. Interface RS232&RS485 or Option IndelRemote Voltage Programming (16 bit) tesolution (0.012% of Vo Rated) ccuracy (0.05%Vo Rated+0.05% of Vo Actual Output)Remote Current Programming (16 bit) tesolution (0.012% of lo Rated) ccuracy (0.2% of lo Rated+0.1% of lo Actual Output) (*13Readback Voltage tesolution (0.012% of Vo Rated) ccuracy (0.1%Vo Rated+0.1% of Vo Actual Output)Readback Current tesolution (0.012% of lo Rated)Readback Current tesolution (0.012% of lo Rated)Couracy (0.1%Vo Rated+0.1% of Vo Actual Output)Readback Current tesolution (0.012% of lo Rated)Couracy (0.3% of lo Rated) | MV mV mA mV mV mV mV | Vout/ lou OVP/UVI On/Off, C Address: Re-start I Baud rate Voltage: Voltage, Voltage, 1 Voltage, 1 0.96 8 1200 0.96 16 | t manual a m | djust by se djust by se djust by se djust by Ve by Ve djust by Ve by Ve by Ve | parate encolt. Adjust e modes (au or current) start, safe r 0,4800,966 5% of rates 5% of rates Preview, F 20 2.40 20 495 495 495 40 40 19.8 | Maximum v oders (coa necoder. uto, safe), F adjust enc node). 00 and 19,2 01 output cur oldback, Lo 030 03.60 030 03.60 060 | rse and fin Foldback cc oder. Num 200. Itage ±1 cc rent ±1 cor ocal, Outp 40 4.80 40 10.2 255 4.80 80 | e adjustme control (CV to ber of addr count. unt. to On, Fron 60 7.2 60 6.6 165 | nt selectal o CC), Go esses:31. Panel Loc 80 9.6 80 126 9.6 160 5.0 | to local co ck, CVCC. 100 12 100 4.0 99 12 200 | 150 18 150 2.6 66 18 300 | 36 300 1.3 33 36 600 | 7 60 0. 16 7 12 |
| 1. Local/Remote analog control 2. Local/Remote analog control Indicator 3. FRONT PANEL Control functions Display Indications 6. Interface RS232&RS485 or Option Iodel Remote Voltage Programming (16 bit) esolution (0.012% of Vo Rated) ccuracy (0.05%Vo Rated+0.05% of Vo Actual Output) Remote Current Programming (16 bit) esolution (0.012% of lo Rated) ccuracy (0.2% of lo Rated) ccuracy (0.2% of lo Rated+0.1% of lo Actual Output) (*13 Readback Voltage esolution (0.012% of Vo Rated) ccuracy (0.1%Vo Rated+0.1% of Vo Actual Output) Readback Current esolution (0.012% of lo Rated) ccuracy (0.3% of lo Rated+0.1% of lo Actual Output) Readback Current esolution (0.012% of lo Rated) ccuracy (0.3% of lo Rated+0.1% of lo Actual Output) (*13 CVP/UVL Programming | mV mV mA mV mV mV mV mV mV mV mA mA mV mA | Vout/ lou OVP/UVI On/Off, C Address: Re-start I Baud rate Voltage: Voltage, Voltage, 3 Interfa 8 0.96 8 1200 0.96 16 | t manual a selection to modes (au a selection to manual a | djust by se djust by se djust by se djust by Voltage (high Re-start by | parate enc. In parate enc. It. Adjust e modes (at or current) start, safe r 0,4800,966 5% of rates for or current) start, safe r 0,4800,966 5% of rates for or current) start, safe r 0,4800,966 5% of rates for or current) start, safe r 0,4800,966 5% of rates for or current start, safe r 0,4800,966 5% of rates for or current start, safe r 1,480 for or current start, | Maximum v oders (coa necoder. uto, safe), F adjust enco node). 10 and 19,2 0 and 19,2 0 and 19,2 30 3.60 30 3.60 60 13.2 440 | rse and fin Foldback or oder. Num 100. Itage ±1 corrent ±1 corrent ±1 corrent ±4 40 4.80 40 10.2 255 4.80 80 10.2 340 | e adjustme entrol (CV to ber of addr bunt. ton, Fron 60 7.2 60 6.6 165 7.2 120 | nt selectal o CC), Go esses:31. Panel Loc 80 9.6 80 5.0 126 9.6 160 5.0 168 | to local co ck, CVCC. 100 12 100 4.0 99 12 200 4.0 132 | 150 18 150 2.6 66 18 300 | 36 300 1.3 33 36 600 | 7 60 0 16 7 12 |
| 1. Local/Remote analog control 2. Local/Remote analog control Indicator 5 FRONT PANEL Control functions Display Indications 6 Interface RS232&RS485 or Option Model Remote Voltage Programming (16 bit) Resolution (0.012% of Vo Rated) | MV mV mA mV mV mV mV | Vout/ lou OVP/UVI On/Off, C Address: Re-start I Baud rate Voltage: Voltage, Voltage, 1 Voltage, 1 0.96 8 1200 0.96 16 | t manual a m | djust by se djust by se djust by se djust by Ve by Ve djust by Ve by Ve by Ve | parate encolt. Adjust e modes (au or current) start, safe r 0,4800,966 5% of rates 5% of rates Preview, F 20 2.40 20 495 495 495 40 40 19.8 | Maximum v oders (coa necoder. uto, safe), F adjust enc node). 00 and 19,2 01 output cur oldback, Lo 030 03.60 030 03.60 060 | rse and fin Foldback cc oder. Num 200. Itage ±1 cc rent ±1 cor ocal, Outp 40 4.80 40 10.2 255 4.80 80 | e adjustme control (CV to ber of addr count. unt. to On, Fron 60 7.2 60 6.6 165 | nt selectal o CC), Go esses:31. Panel Loc 80 9.6 80 126 9.6 160 5.0 | to local co ck, CVCC. 100 12 100 4.0 99 12 200 | 150 18 150 2.6 66 18 300 | 36 300 1.3 33 36 600 | 7 60 0 16 7 12 |

- *3: For cases where conformance to various safety standards (UL, IEC, etc..) is required, to be described as 190-240Vac (50/60Hz) for single phase and 3-Phase 208V models,
- and 380~415Vac (50/60Hz) for 3-Phase 400V models.

 *4: Single-Phase and 3-Phase 208V models: At 208Vac input voltage, 3-Phase 400V: At 380Vac input voltage. With rated output power.

 *5: Not including EMI filter inrush current, less than 0.2mSec.
- *6: Single-Phase and 3-Phase 208V models: 170~265Vac, constant load. 3-Phase 400V models: 342~460Vac, constant load.
- $^{\star}9$: From 10% to 90% or 90% to 10% of Rated Output Voltage, with rated, resistive load.
- *10:From 90% to 10% of Rated Output Voltage.
- *11:For load voltage change, equal to the unit voltage rating, constant input voltage.
 *12:For 8V~15V models the ripple is measured from 2V to rated output voltage and rated output current. For other models, the ripple is measured at 10~100% of rated output voltage and rated
- *13: The Constant Current programming readback and monitoring accuracy does not include the warm-up and Load regulation thermal drift.

General Specifications Genesys™ 3.3kW

| | | | | _ | | | | | | | | | | |
|-----------------------------------|---------------------------|-----------|---|---|-------------|-------------|--------------|-------------|------------|----------|-------------|--------------|--------|---------|
| 2.1 INPUT CHARA | CTERISTICS | GEN | 8-400 | 10-330 | 15-220 | 20-165 | 30-110 | 40-85 | 60-55 | 80-42 | 100-33 | 150-22 | 300-11 | 600-5.5 |
| 1. Input voltage/fre | eq. (*3) | | Single Pl | nase,230V ı | models: 17 | 0~265Vac, | 47~63Hz | | | | | | | |
| i - | | VAC | 3-Phase, | 208V mode | els: 170~26 | 65Vac, 47~ | 63Hz | | | | | | | |
| | | | 3-Phase, | 400V mode | els: 342~46 | 60Vac, 47~ | 63Hz | | | | | | | |
| 2. Maximum | Single Phase,230V models: | | 24 | 24 | 24 | 23 | 24 | 23 | 23 | 23.5 | 23 | 23 | 23 | 23 |
| Input current at 100% load | 3-Phase, 208V models: | A | 14.5 | 14.5 | 14.5 | 14.5 | 14 | 14.5 | 13.6 | 14 | 13.7 | 13.7 | 13.8 | 13.9 |
| at 100 /6 10au | 3-Phase, 400V models: | | 7.2 | 7.2 | 7.2 | 7.2 | 7 | 7.2 | 6.8 | 7 | 6.8 | 6.8 | 6.9 | 7 |
| Power Factor (T | īyp) | | Single Ph | ase models | s: 0.99@23 | 0Vac, rated | d output pov | ver. 3-Phas | se models: | 0.94@208 | /380Vac, ra | ted output p | ower. | |
| 4. Efficiency (*4) | | % | 82 | 84 | 84 | 86 | 86 | 88 | 88 | 88 | 88 | 88 | 88 | 87 |
| 5. Inrush Current (| ^ | Single-Pl | Single-Phase and 3-Phase 208V models: Less than 50A | | | | | | | | | | | |
| | | A | 3-Phase | -Phase 400V models: Less than 20A | | | | | | | | | | |
| 6. Hold-up time (Ty | yp) | mS | 10mSec | nSec for Single-Phase and 3-phase 208V models, 6mSec for 3-Phase 400V models. Rated output power. | | | | | | | | | | |

2.2 POWER SUPPLY CONFIGURATION

| Parallel Operation | Up to 4 identical units in master/slave mode with parallel current summing (Advanced Parallel) |
|---------------------|--|
| 2. Series Operation | Up to 2 identical units. with external diodes. 600V Max to Chassis ground |

2.3 ENVIRONMENTAL CONDITIONS

| Operating temp | 0~50 °C, 100% load. |
|---------------------|---|
| 2. Storage temp | -30~85°C |
| Operating humidity | 20~90% RH (non-condensing). |
| 4. Storage humidity | 10~95% RH (non-condensing). |
| 5. Vibration | MIL-810F, method 514.5 , The EUT is fixed to the vibrating surface. |
| 6. Shock | Less than 20G , half sine , 11mSec. Unit is unpacked. |
| 7. Altitude | Operating: 10000ft (3000m), Derate output current by 2%/100m above 2000m, Alternatively, derate maximum ambient temp. by 1°C/100m above 2000m. Non operating: 40000ft (12000m). |
| 8. RoHS Compliance | Complies with the requirements of RoHS directive. |

2.4 EMC

| 1.Applicable Standards: | |
|----------------------------|---|
| 2.ESD | IEC1000-4-2. Air-disch8KV, contact disch4KV |
| 3. Fast transients | IEC1000-4-4. 2KV |
| 4. Surge immunity | IEC1000-4-5. 1KV line to line, 2KV line to ground |
| 5. Conducted immunity | IEC1000-4-6, 3V |
| 6.Radiated immunity | IEC1000-4-3, 3V/m |
| 7. Magnetic field immunity | EN61000-4-8, 1A/m |
| 8. Voltage dips | EN61000-4-11 |
| 9. Conducted emission | EN55022A, FCC part 15-A, VCCI-A. |
| 10. Radiated emission | EN55022A, FCC part 15-A, VCCI-A. |

2.5 SAFETY

| 1.Applicable standards: | | | | | | |
|-------------------------|---|--|--|--|--|--|
| | 40 <vout<400v: analog="" are="" hazardous,="" ieee="" is="" isolated="" output="" selv.<="" td=""></vout<400v:> | | | | | |
| | 400 <vout<600v:output analog="" are="" hazardous,="" ieee="" is="" isolated="" not="" selv.<="" td=""></vout<600v:output> | | | | | |
| 2.Withstand voltage | Vout::40V models :Input-Outputs (SELV): 4242VDC 1min, Input-Ground: 2828VDC 1min. | | | | | |
| | 40 <vout<100v 1min,="" 1min.<="" 2600vdc="" 4242vdc="" input-haz.="" input-selv:="" models:="" output:="" td=""></vout<100v> | | | | | |
| | Hazardous OutputSELV: 1900VDC 1min, Hazardous Output-Ground:1200VDC 1min. Input-Ground: 2828VDC 1min. | | | | | |
| | 100 <vout<600v 1min,="" 1min.<="" 4000vdc="" 4242vdc="" input-haz.="" input-selv:="" models:="" output:="" td=""></vout<600v> | | | | | |
| | Hazardous OutputSELV: 3550VDC 1min. Hazardous Output-Ground:2670VDC 1min. Input-Ground: 2828VDC 1min. | | | | | |
| 3.Insulation resistance | More than 100Mohm at 25°C , 70% RH. | | | | | |

2.6 MECHANICAL CONSTRUCTION


| 2.6 MECHANICAL CONSTRUCTION | | | |
|---|---|--|--|
| 1. Cooling | Forced air flow: from front to rear. No ventilation holes at the top or bottom of the chassis; Variable fan speed. | | |
| 2. Dimensions (WxHxD) | V: 16.65in, H: 3.46in, D: 17.42in (excluding connectors, encoders, handles, etc.) | | |
| 3. Weight | 13 kg. | | |
| 4. AC Input connector (with Protective Cover) | Single Phase, 230V models, Power Combicon PC 6-16/3-GF-10,16 series, with Strain relief. | | |
| | 3-Phase, 208V & 400V models, Power Combicon PC 6-16/4-GF-10,16 series, with Strain relief. | | |
| 5.Output connectors | 8V to 100V models: Bus-bars (hole Ø 10.5mm). 150V to 600V models: wire clamp connector, Phoenix P/N: FRONT-4-H-7.62 | | |


2.7 RELIABILITY SPECS

| 1. Warranty | 5 years. |
|-------------|----------|
| | |

All specifications subject to change without notice.

Outline Drawing Genesys™ 3.3kW Units

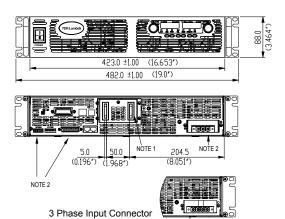

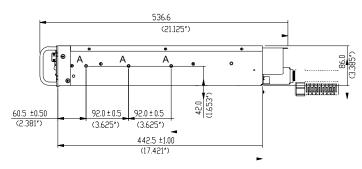

NOTE

- 1. Bus bars for 8V to 100V models (shown)
 Wire clamp connector for 150V to 600V models
- 2. Plug connectors included with the power supply
- Chassis slides mounting holes #10-32 marked "A"
 GENERAL DEVICES P/N: C-300-S-116 or equivalent

Genesys™ Power Parallel and Series Configurations

Parallel operation - Master/Slave:

Active current sharing allows up to four identical units to be connected in an auto-parallel configuration for four times the output power.

In Advanced Parallel Master/Slave Mode, total current is programmed and reported by the Master. Up to four supplies act as one.



Series operation


Up to two units may be connected in series to increase the output voltage or to provide bipolar output. (Max 600V to Chassis Ground).

Remote Programming via RS-232 & RS-485 Interface

Standard Serial Interface allows daisy-chain control of up to 31 power supplies on the same communication bus with built-in RS-232 & RS-485 Interface with or without Multi-Drop option.





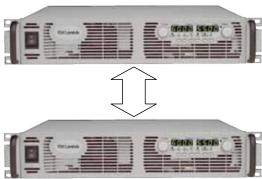

Programming Options (Factory installed)

New IEEE Multi-Drop Interface

- Allows IEEE Master to control up to 30 (Multi-Drop equipped) slaves over RS-485 daisy-chain
- Only the Master needs be equipped with IEEE Interface
- IEEE 488.2 SCPI Compliant
- Program Voltage
- Measure Voltage
- Over Voltage setting and shutdown
- · Error and Status Messages

- Program Current
- Measure Current
- Current Foldback shutdown

New Multi-Drop Slave Option

• Slaves need to be equipped with the MD Slave (RS-485) option

Isolated Analog Programming

- Four Channels to Program and Monitor Voltage and Current.
- Isolation allows operation with floating references in harsh electrical environments.
- · Choose between programming with Voltage or Current.
- Connection via removable terminal block: Phoenix MC1,5/8-ST-3.81.

• Voltage Programming, user-selectable 0-5V or 0-10V signal.

Power supply Voltage and Current Programming Accuracy ±1% Power supply Voltage and Current Monitoring Accuracy ±1.5%

Current Programming with 4-20mA signal.

Power supply Voltage and Current Programming Accuracy ±1% Power supply Voltage and Current Monitoring Accuracy ±1.5%

LAN Interface LXI Compliant to Class C P/N: LAN

- Meets all LXI-C Requirements
- Address Viewable on Front Panel
- Fixed and Dynamic Addressing
- Fast Startup

- VISA & SCPI Compatible
- LAN Fault Indicators
- Auto-detects LAN Cross-over Cable
- · Compatible with most standard Networks

USB Interface P/N: USB

- Allows Serial Connection to USB Port on computer
- Serial commands same as (standard) RS-232/RS-485 Interface

P/N: IEMD

P/N: MD

P/N: IS510

P/N: IS420

Power Supply Identification / Accessories How to order

GEN 400 **Factory Options** AC Input options Series Output Output Option: : IEMD 1P230 (Single Phase 230VAC) Name Voltage Current MD 3P208 (Three Phase 208VAC) (0~8V)(0~400A) **IS510** 3P400 (Three Phase 400VAC) IS420 LAN

USB

Models 3.3kW

| | Output | Output | Output |
|------------|---------|---------|--------|
| Model | Voltage | Current | Power |
| | VDC | (A) | (W) |
| GEN 8-400 | 0~8V | 0~400 | 3200 |
| GEN 10-330 | 0~10V | 0~330 | 3300 |
| GEN 15-220 | 0~15V | 0~220 | 3300 |
| GEN 20-165 | 0~20V | 0~165 | 3300 |
| GEN 30-110 | 0~30V | 0~110 | 3300 |
| GEN 40-85 | 0~40V | 0~85 | 3400 |

| ſ | | Output | Output | Output |
|---|-------------|---------|---------|--------|
| 1 | Model | Voltage | Current | Power |
| 1 | | VDC | (A) | (W) |
| | GEN 60-55 | 0~60V | 0~55 | 3300 |
| | GEN 80-42 | 0~80V | 0~42 | 3360 |
| | GEN 100-33 | 0~100V | 0~33 | 3300 |
| | GEN 150-22 | 0~150V | 0~22 | 3300 |
| | GEN 300-11 | 0~300V | 0~11 | 3300 |
| | GEN 600-5.5 | 0~600V | 0~5.5 | 3300 |

P/N **Factory options**

RS-232/RS-485 Interface built-in Standard GPIB (Multi-Drop Master) Interface **IEMD** Multi-Drop Slave Interface MD Voltage Programming Isolated Analog Interface IS510 Current Programming Isolated Analog Interface **IS420** LAN Interface LAN **USB** Interface **USB**

Accessories

1. Serial Communication cable

RS-232/RS-485 cable is used to connect the power supply to the Host PC.

| Mode | RS-485 | RS-232 | RS-232 |
|---|---|---|--|
| PC Connector Communication Cable Power Supply Connector | DB-9F Shield Ground L=2m EIA/TIA-568A (RJ-45) | DB-9F Shield Ground L=2m EIA/TIA-568A (RJ-45) | DB-25F Shield Ground L=2m EIA/TIA-568A (RJ-45) |
| P/N | GEN/485-9 | GEN/232-9 | GEN/232-25 |

2. Serial link cable*

Daisy-chain up to 31 Genesys[™] power supplies.

| Mode | Power Supply Connector | Communication Cable | P/N |
|--------|------------------------|----------------------|----------|
| RS-485 | EIA/TIA-568A (RJ-45) | Shield Ground L=50cm | GEN/RJ45 |

^{*} Included with power supply



Also Available Genesys™ 1U Half Rack 750W *1U 750W/1500W* 2U 5kW 3U 10/15kW